



Curlin Ambulatory - Continuous PASV

www.uihealthcare.com/homecare

1-888-262-6469

The Curlin Pump can be used to infuse antibiotics, hydration fluid, chemotherapy or Total Parenteral Nutrition and other therapies. Your nurse and pharmacist will already have programmed the pump to operate as the physician has ordered by the time you receive it.

Before you begin:

1. Wash hands thoroughly.
2. Prepare work area.
3. Gather the following supplies:

- Curlin pump
- Medication or fluid bag (take out to warm one hour ahead of time)
- IV tubing
- Alcohol wipes
- Red cap
- 2 syringes of saline – **REMOVE AIR**

Change tubing every day.

Valve to be changed weekly by nurse.

NEW Red cap to be put on end of medication tubing after every dose if using tubing again.

Attach tubing to medicine container

1. Remove the tubing from its wrapper.
2. Remove the protective cover from the spike port of your medication bag and remove IV tubing spike cover, being careful not to touch the opening.
3. With a twisting motion, insert the spike into the port, until it is all the way in.
4. To prime your tubing (get it full of fluid), lay it on its side and apply gentle pressure. If your tubing has a filter let the filter hang down as it fills. Let fluid fill to end of tubing, then twist off yellow tab on bottom of yellow Flow-Stop.

Attach the Tubing Set to the Pump

1. Open the top of the pump by lifting the latch on top of the door and pull door up and all the way to the right.
2. Place the blue tab on tubing into the slot at the blue arrow.
3. **Without pressing on the top of the Flow-Stop**, insert the Flow-Stop at an angle into the slot on the left side of the pump in the direction of the yellow arrow.
4. Push the tubing slightly into the black Air Detector slot.
5. Close the door of the pump and latch it securely.

Flush the Catheter and attach tubing

1. Have prepared normal saline syringe ready.
2. Wipe off end of valve with alcohol prep pad.
2. Unscrew the cap from the syringe and screw the saline syringe on end of valve. Inject the normal saline using pulse flush.
3. Unscrew syringe and screw medication tubing on end of valve.

Turn the Pump On

1. Press the **ON/OFF** key. The pump will perform a self-test and beep three times. A series of screens will appear.
2. The first screen has a black bar across **PROGRAM**, press **YES** key.
3. On the second screen, arrow down so the black bar is over **REPEAT RX**, press **YES** key.
4. If screen says, **ALERT RX IN PROGRESS**, press **YES** to repeat.
5. The pump will automatically scroll through confirmation screens.
6. When the **RUN** screen appears, press the **RUN** key.
7. The pump will now be running. There will be a flashing green light next to the **ON/OFF** key and the pump screen will rotate through infusion status readings during infusion.

Stop the infusion

1. When the pump alarms and says. **INFUSION COMPLETE**, press the **RUN/PAUSE** key, then the **ON/OFF** key. The pump is now off.
2. Unscrew medication tubing from valve. If using tubing for next dose, place a new red cap on end of tubing. If not, discard medication tubing, no cap is needed.

Flush the Catheter

1. Wipe end of valve with alcohol prep pad.
2. Screw saline syringe on valve. Inject saline using pulse flush.

ALARMS

When an alarm sounds you will hear a beep(s), the red alarm light will flash and the data screen will display the reason for the alarm.

To silence the alarm, press the **SILENCE** key. This will silence the alarm for one minute.

After resolving the alarm press the **RUN/PAUSE** key and then resume the infusion by pressing **YES**.

<p>ALARM AIR-IN-LINE</p>	<p>Air in tubing</p>	<p>Press RUN/PAUSE key. Open top of pump by lifting latch on top of the pump door and pulling door up and all the way to the right. Remove tubing and push down on the top of the Flow-Stop while applying gentle pressure on medicine bag until air is past the Flow-Stop. Put tubing back into pump and press RUN/PAUSE key to resume infusion.</p>
<p>ALARM DOOR OPEN OR SET NOT PROPERLY INSTALLED</p>	<p>The pump door is open or the tubing is not inserted correctly</p>	<p>Check placement of the tubing and close the pump door properly.</p>
<p>LOW BATTERY ALERT</p>	<p>Pump has a low battery and will beep periodically and display "Low battery message"</p>	<p>Shut pump off by pressing the RUN/PAUSE key and then the OFF key. Replace both batteries. Press ON, press YES to PROGRAM , and YES to RESUME infusion. Press RUN/PAUSE key.</p>
<p>ALARM EMPTY BATTERY</p>	<p>Battery does not have enough power to run the pump.</p>	<p>Replace the batteries as stated above or shut pump off and connect to AC adaptor.</p>
<p>INFUSION COMPLETE</p>	<p>Infusion complete</p>	<p>Press RUN/PAUSE, add another IV bag and select REPEAT key to continue therapy or turn pump OFF by pressing the RUN/PAUSE key, then the OFF key.</p>

ALARM UP OCCLUSION (pump detects a blockage between bag of fluid and pump)	Kink in upper tubing	Press RUN/PAUSE key, un-kink tubing and select “Resume” by pressing the YES key to resume your infusion OR Arrow down to “Repeat Rx”, press YES , then press RUN/PAUSE key to start infusion.
ALARM DOWN OCCLUSION (pump detects a blockage between the pump and the patient)	Tubing or line clamp is closed Kink in lower tubing Block in patient’s IV line	Open clamp Straighten tubing between the pump and the patient Straighten arm Change body position. Call nurse
ALARM HIGH UP PRESSURE	Pump has detected pressure on the IV bag	Press RUN/PAUSE key, check for excessive pressure in the medicine bag, and relieve it. Select “Resume” by pressing the YES key.
ALARM SET NOT INSTALLED	The tubing set has not been correctly inserted into pump.	Check tubing to make sure it is inserted correctly
ALARM REPLACE SET	Pump has detected that the tubing must be replaced	Replace the tubing set
ALARM UNATTENDED PUMP	Pump is paused for more than two minutes.	Press RUN/PAUSE key to resume the infusion
ERROR CODE	Pump has detected an error	Turn pump off, then back on and resume infusion

To replace batteries: Open the door by depressing the recessed release pin with a small coin and sliding the battery door down.

TIP: Green light blinks when pump is running
Yellow light blinks when pump is paused
Red light blinks when there is an alarm

